
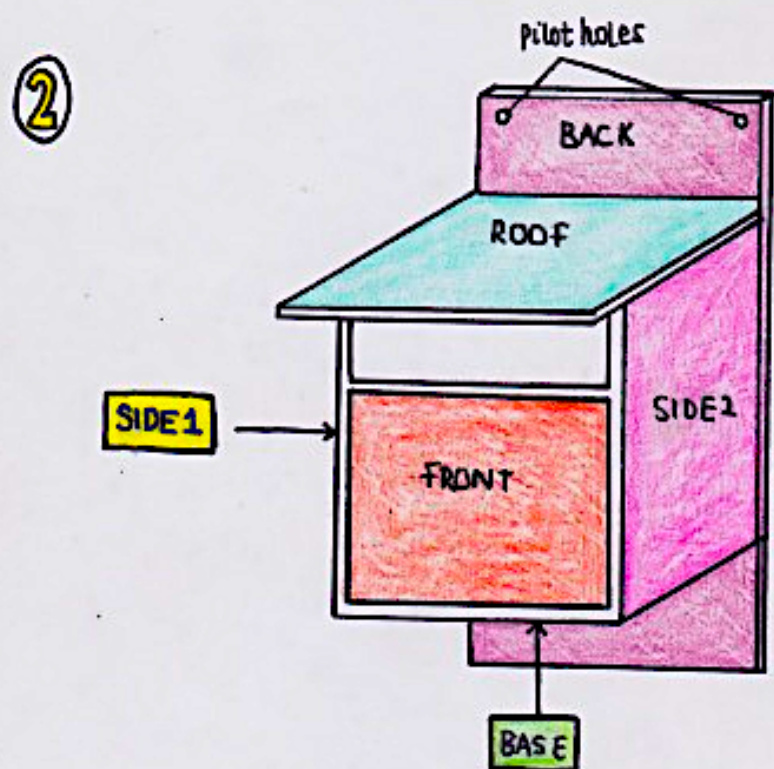


MAKE YOUR OWN OPEN-FRONTED NEST BOX

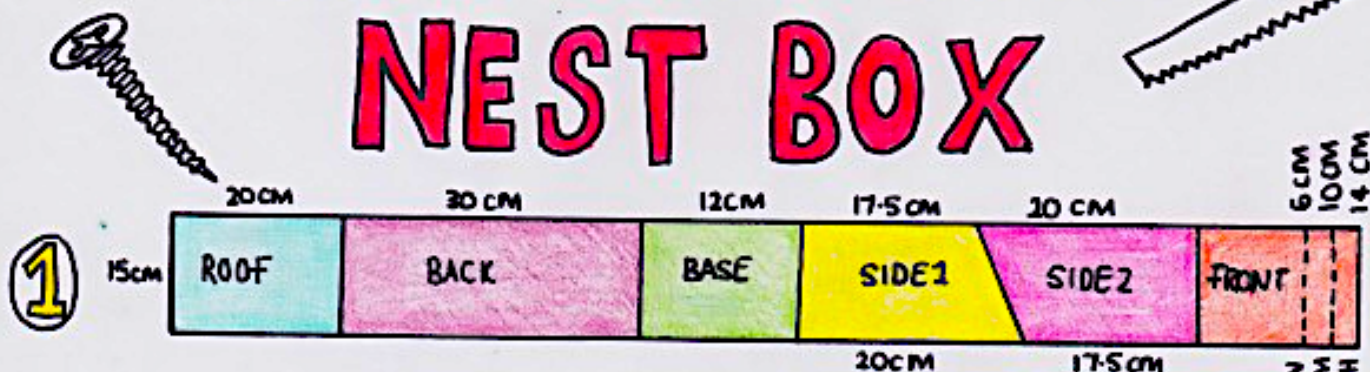

ASSEMBLE!

- use a drill and screws and make pilot holes if you are using hardwood like oak.
- use hammer and nails if you are using softwood like pine.
- pilot holes will be needed for installation to prevent the wood splitting.
- secure the roof to the back with roofing felt.

3 INSTALL

- Make sure the box is facing North/North East and has a good amount of natural coverage such as ivy/brambles etc.
- Don't put the box too low down where nesting birds could be at risk of predation.



Inspired by BTO Robin Nest Box Design